
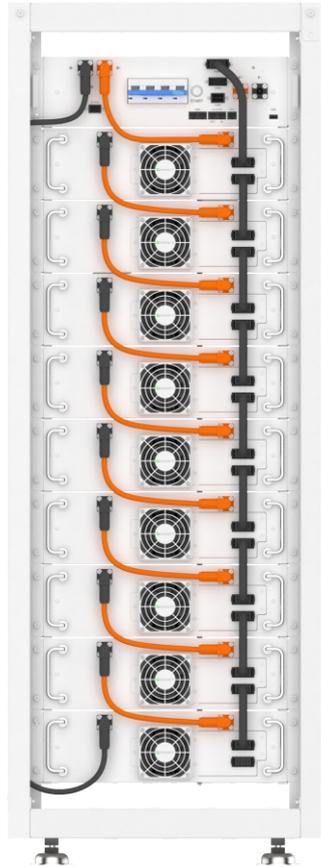


Quick Guide

AXE 45.0~60.0H-1HR-E1

AXE 15.0~40.0H-1HR-E1

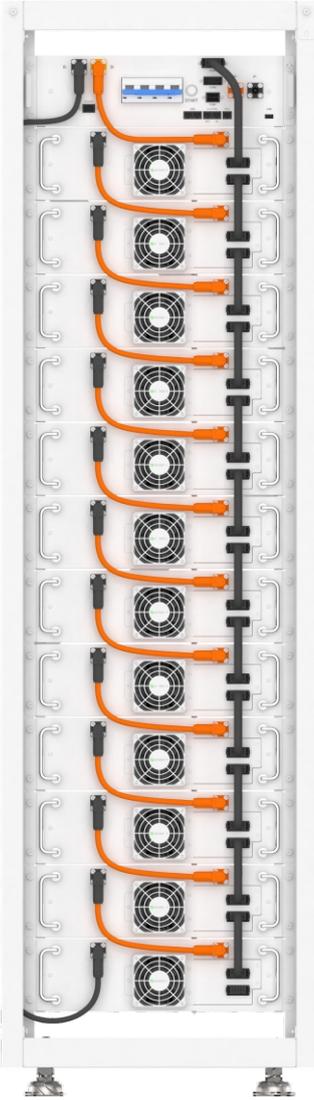

Installation environment



Max. +50°C



Min. -10°C




RH+5%~+95%

Installation tools




Knife



Cross-head screwdriver



Wrench

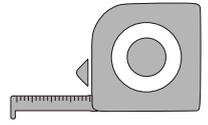


Measuring tape




Electric screwdriver



Level

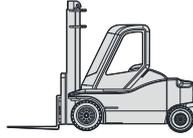

Forklift

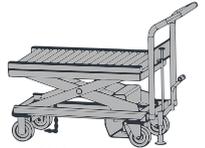


Lifting platform

Appearance & Dimensions


This battery rack comes in two versions: for the standard version, up to 12 battery modules can be installed; for the smaller version, a maximum of 9 battery modules can be installed.

Standard version

Unit: mm

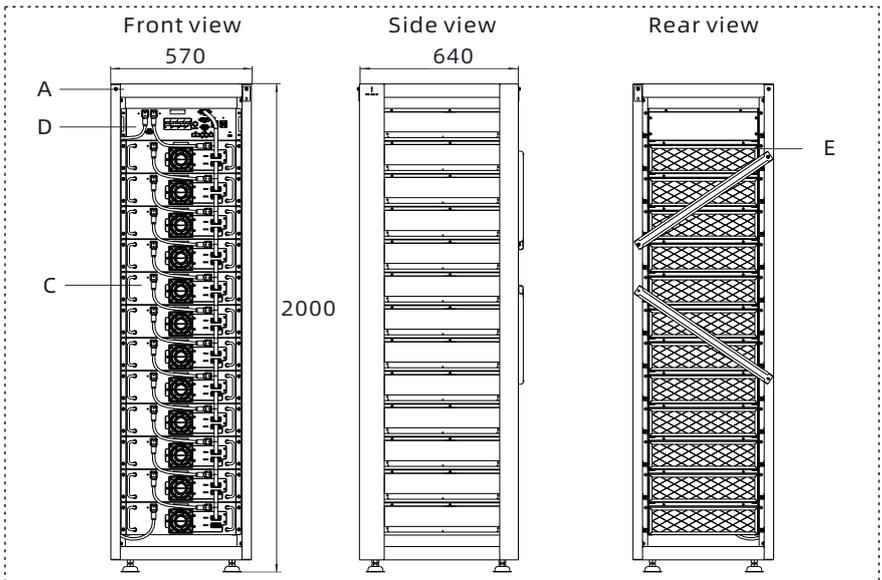


Smaller version

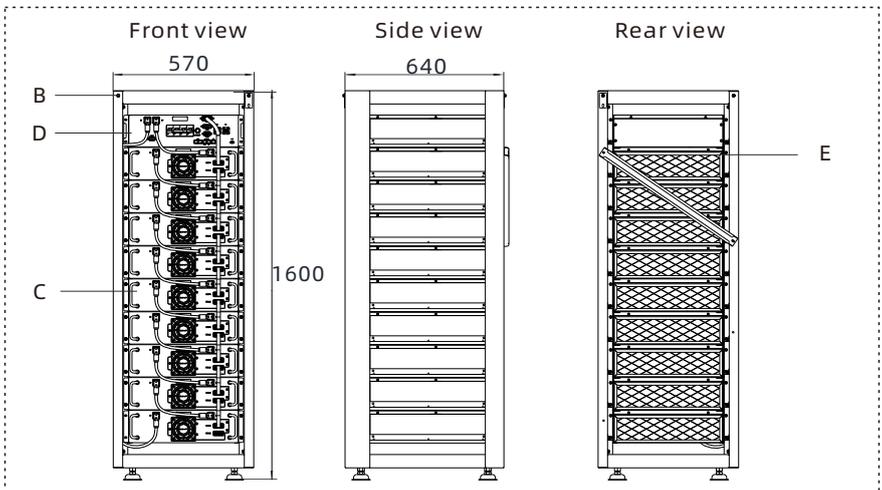

A	B	C	D	E
Standard rack	Smaller rack	Battery module	High voltage box	Dust-proof net


1. Checking before installation

1-1 Introduction to the rack components




Right frame

A



Left frame

B




Horizontal frame

C



Diagonal support

D



Dust-proof net

E



Foot mount

F



M6*16 screw

G



Quick installation guide

H




Ground terminal

I

Version	Composition
Standard	$A+B+4*C+2*D+12*E+4*F+95*G+1*H+2*I$
Smaller	$A+B+4*C+1*D+9*E+4*F+80*G+1*H+2*I$

1-2 Checking the package of high voltage box

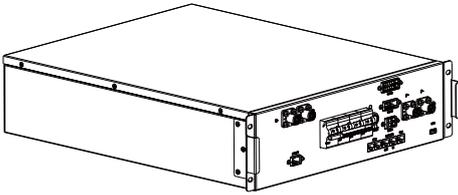

High voltage box (CM)

A



B



C



D



- A Warranty Card
- B Short-circuit connector cap
- C COM1-COM3 communication cable
- D BM-CM positive power cable
- E BM-CM negative power cable
- F BMS-AC cable
- G PCS-CM negative power cable
- H PCS-CM positive power cable
- I RJ45 Network cable

E



F



G




H



I



1-3 Checking the package of battery module

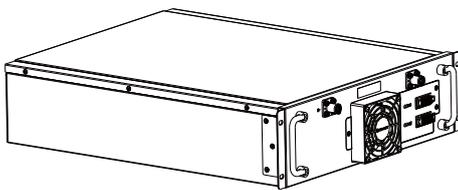

Battery module (BM)

A



B




C



- A Warranty Card
- B COM1-COM2 communication cable
- C BM series power cable


2.Component description

2-1 Introduction to the panel of the high voltage box

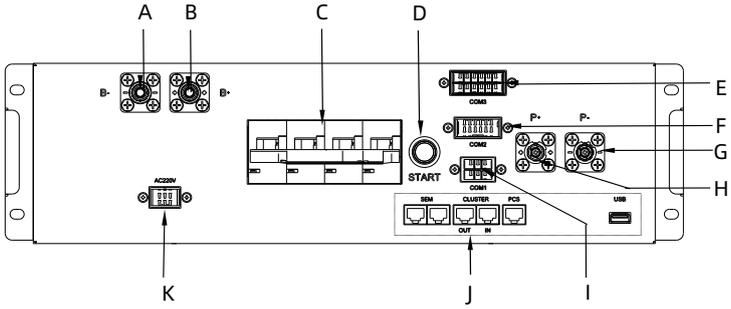

Position	Item	Description
A	BAT- power terminal	Connected to the negative power terminal of the battery cluster
B	BAT+ power terminal	Connected to the positive power terminal of the battery cluster
C	Circuit breaker	To control the battery output
D	Start button	To power on/off the energy storage system
E	COM3 communication terminal	Connected to the communication port of the battery pack's BM board and the 24V power supply port
F	COM2 communication terminal	Connected to panel indicators, tripping control board and emergency stop switch, etc.
G	PCS- power output terminal	Connected to the negative terminal on the DC side of the PCS
H	PCS+ power output terminal	Connected to the positive terminal on the DC side of the PCS
I	COM1 communication terminal	Connected to the RS485 communication port and the 24V power supply port of the EM (Environmental Monitor) board
J	Common wiring terminals	Connected to communication terminals of PCS, SEM and USB
K	Power supply port	Auxiliary AC 220V power input


2-2 Introduction to the panel of the battery pack

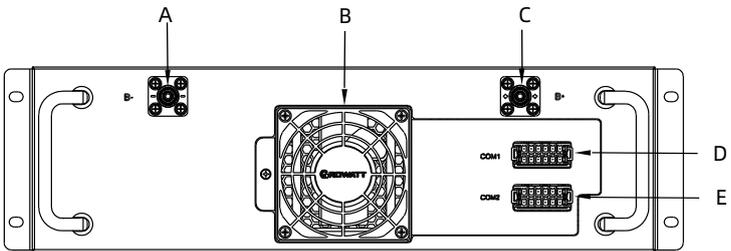

Position	Item	Description
A	Negative battery pack terminal	Negative battery pack connector
B	Cooling fan	For battery heat dissipation
C	Positive battery pack terminal	Positive battery pack connector
D	COM1 communication terminal	For communication between battery packs, and power supply
F	COM2 communication terminal	For communication between battery packs, and power supply

3. Installation


3-1 Installation of the rack

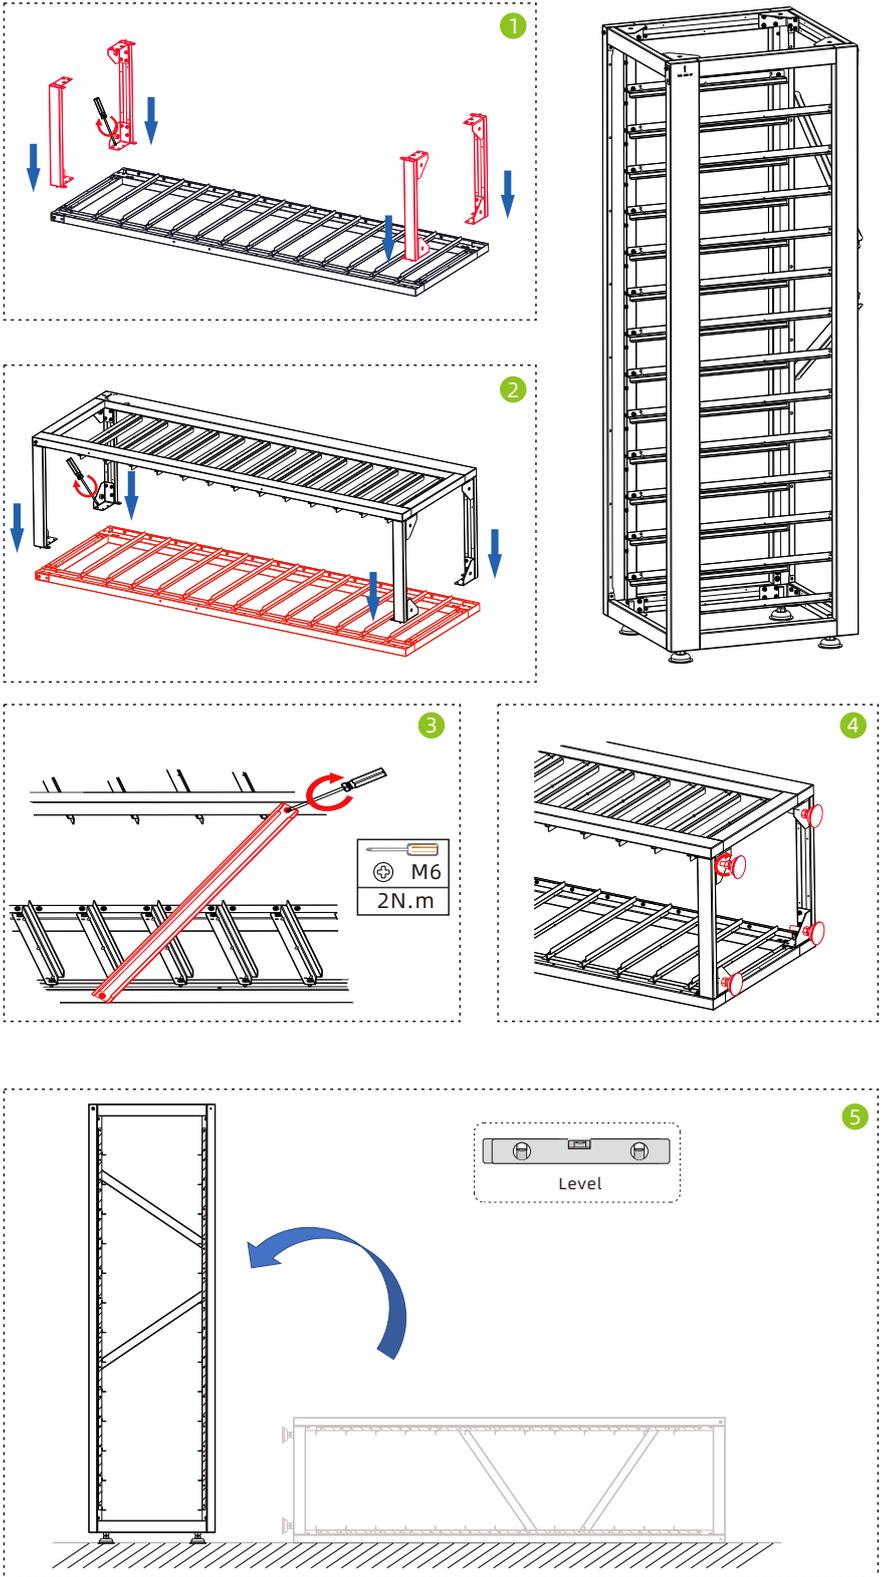

- 1 Assemble the right frame, left frame and 4 horizontal frames to form a rectangular support rack.
- 2 Secure the horizontal frames to the left and right frames using the M6 combination screws.
- 3 Attach the two diagonal supports to the rear of the rectangular rack using the M6 combination screws.
- 4 Rotate the four foot mounts to the bottom of the rack and tighten them with a wrench or by hand. Upon completion of installation, stand the rack upright.
- 5 Stand the rack up and adjust the foot mount to ensure the rack is level.

3-2 Transportation of the rack

When moving the equipment rack with a forklift, secure it properly according to the actual situation to avoid tip-overs. Note: Forklifts cannot transport racks with batteries installed.

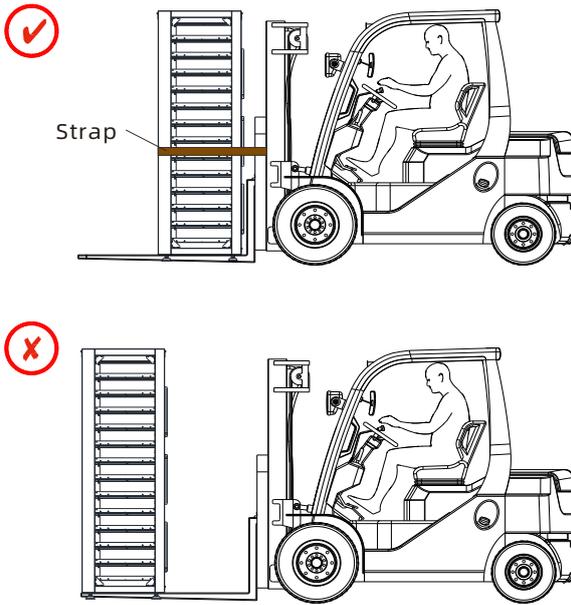


3-3 Installation of environmental requirements

The battery system is necessary to be installed in closed rooms at least 14km offshore, or closed rooms with air conditioning 5-14km offshore. The battery energy storage system may only be installed and operated in closed rooms, and works in an ambient temperature range of -10°C to 50°C and at a maximum humidity of 95%. The battery rack may not be exposed to direct sunlight or placed directly beside sources of heat.


The clearance requirements are shown below. Take the installation of three battery rack connected with the PCS (WIT 29.9-50K-XHU) as an example.

Unit: mm

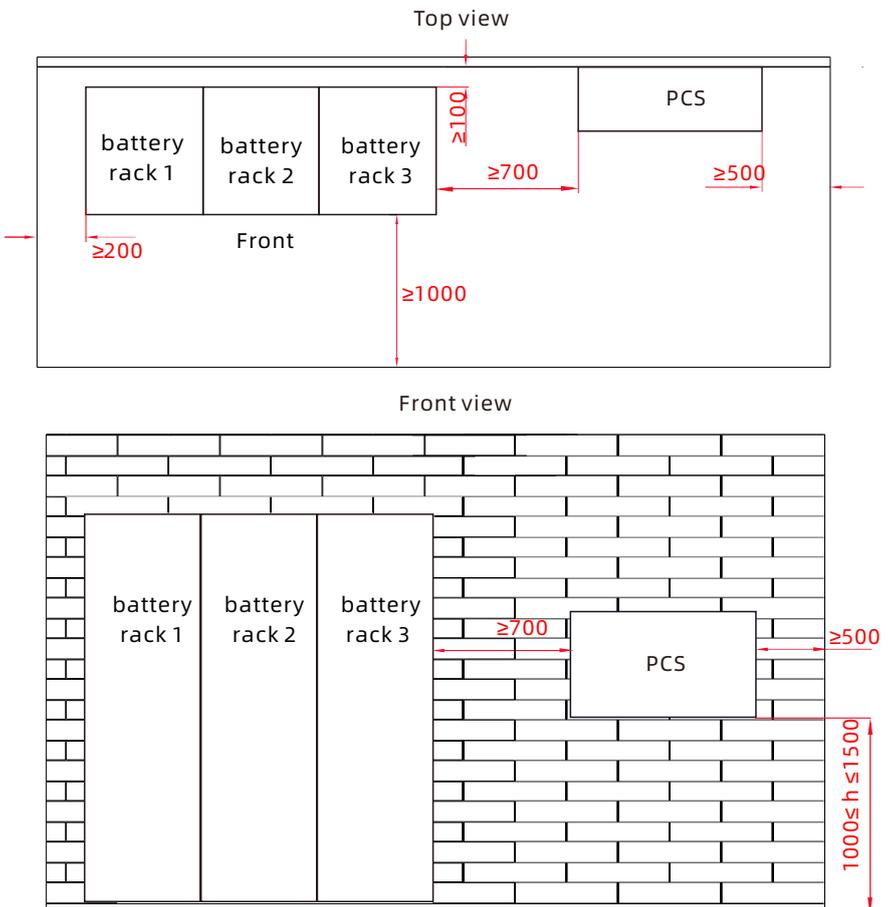


4. Installation of battery modules and cable connections

4-1 Wiring of the grounding cable of the rack

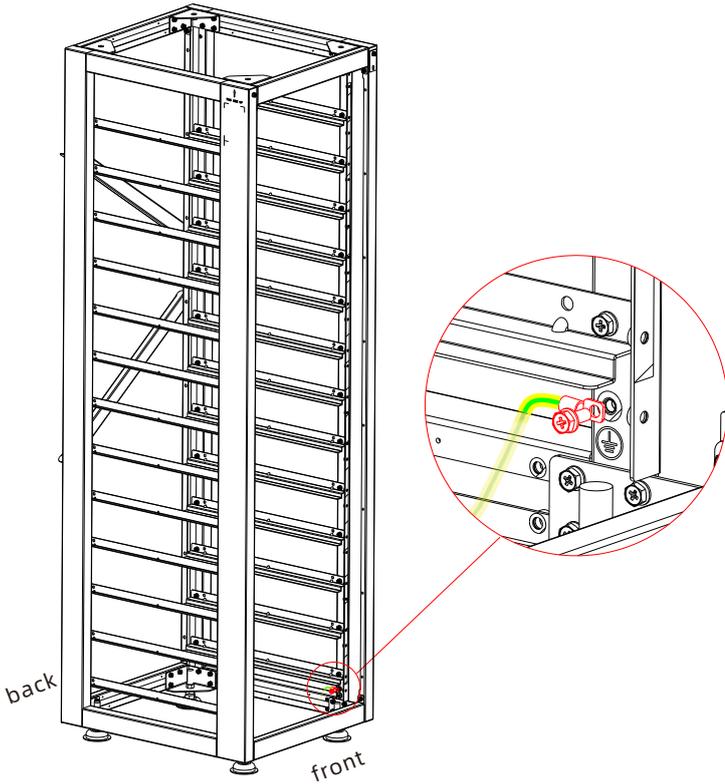


4-2 Installation of battery modules

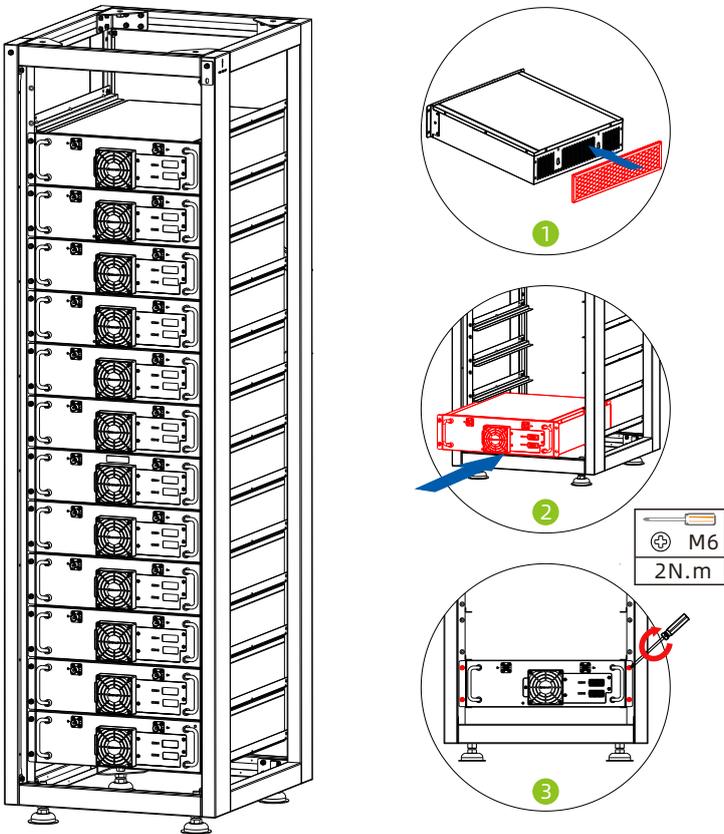

- 1 Install the dust filter at the rear of the battery module.
- 2 Install the battery modules into the slots of the rack from bottom to top.
- 3 Secure the battery modules to the rack using the M6 combination screws.

4-3 Installation of the high voltage box


The high-voltage box can be installed on the top or bottom of the battery rack. Top mounting is preferred.

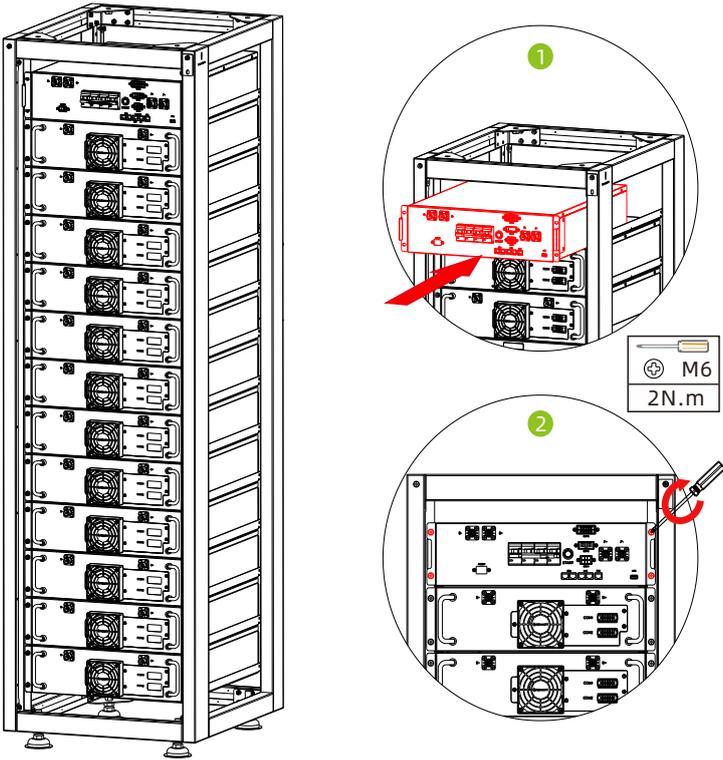

- 1 Push the high voltage box to the topmost slot.
- 2 Secure the high voltage box to the rack using the M6 combination screws.


4-4 Cable connections

1 Wiring of power cables between battery modules

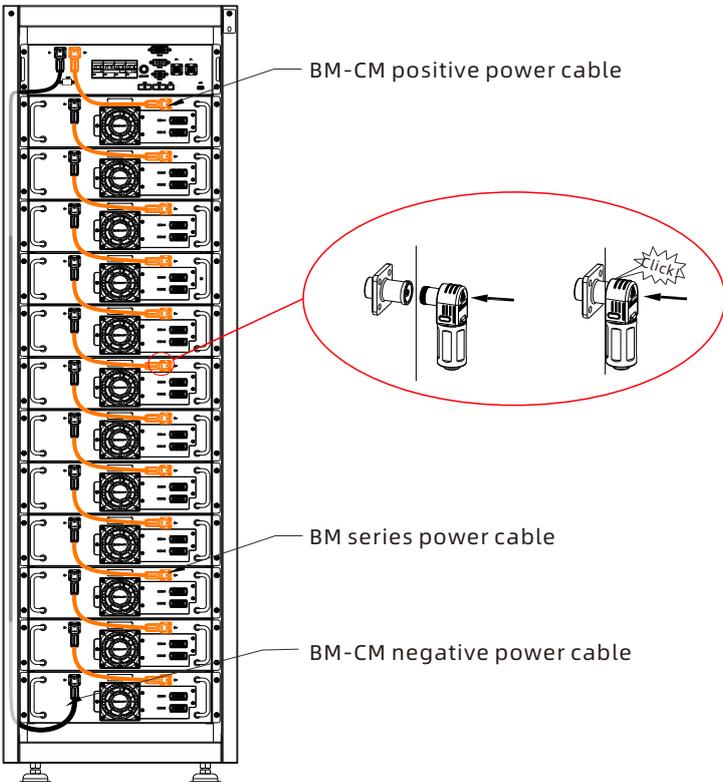


Please measure the voltage of each battery pack accurately before connecting the power cable. The bottom battery pack "B-" terminal is connected to the high-voltage box "B-" terminal. The "B +" terminal of the top battery pack is connected to the "B +" terminal of the high-voltage box.

2 Wiring of communication cables between battery modules

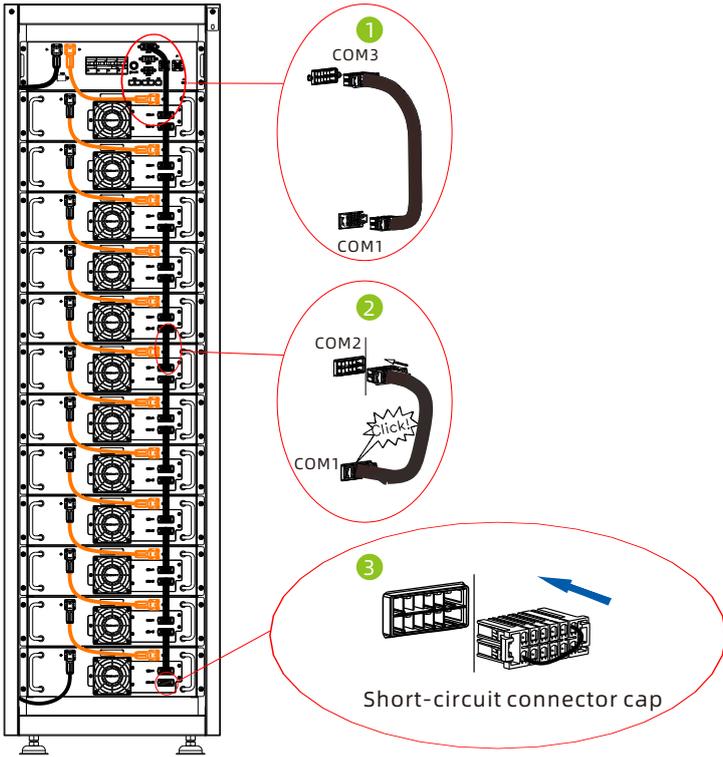

- 1 The top battery pack COM1 is connected to the high-voltage box COM3 with a communication cable
- 2 Connect the COM1 and COM2 terminals between the battery packs with a communication cable
- 3 Bottom Battery Pack COM2 Terminal Insert short-circuit connector cap

3 Wiring of cables between the rack and the PCS

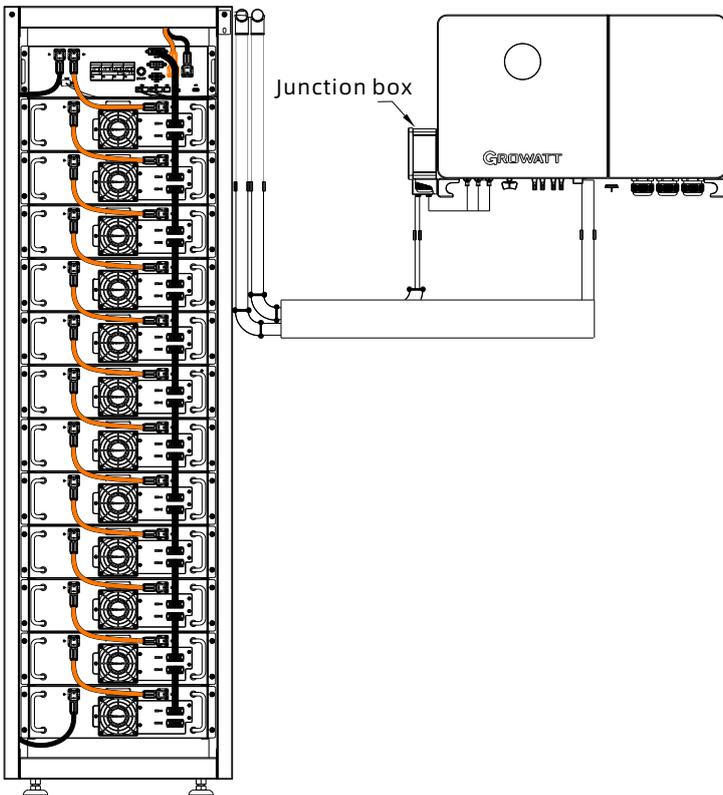

The P+ \ P- terminal of the high-voltage box is connected to the P+ \ P- terminal of the PCS

5. Check before power-on

5-1 Routine check

No.	Checking item	Acceptance criteria
1	Equipment appearance	<ul style="list-style-type: none"> The equipment is intact, free from damage, rust or paint loss. If the paint flakes off, please re-paint the spotted area. Equipment labels are clear and damaged labels should be replaced in time.
2	Cable appearance	<ul style="list-style-type: none"> The cable sheath is properly wrapped with no visible damage. The cable conduits are intact.
3	Cable connection	<ul style="list-style-type: none"> Cables are connected at the designate positions. Wiring terminals are prepared as required and connected reliably. Labels on both end of each cable is clear and facing toward the same direction.
4	Cable routing	<ul style="list-style-type: none"> Electrical cables and extra low voltage cables are routed separately. The cables are neat and tidy. Cable tie joints are evenly cut without burs. Leave the cable slack at bending points to avoid stress. Cables are routed neatly without twists or crossovers.
5	Switch	<ul style="list-style-type: none"> The switch on the external AC distribution panel or the distribution panel is in the OFF position. The switch on the high voltage box is in the OFF position.

5-2 Rack inspection

No.	Checking item	Acceptance criteria
1	Installation	<ul style="list-style-type: none"> Installation complies with the design requirements. The rack is level, and each battery module can be properly installed.
2	Appearance	<ul style="list-style-type: none"> The surface is free from cracks, dents and scratches. If the paint flakes off, re-paint the spotted area.
3	Rack grounding	<ul style="list-style-type: none"> Each rack has at least one grounding point and should be grounded reliably. The site ground resistance should be less than or equal to 0.1Ω.
4	Label	<ul style="list-style-type: none"> Labels are correct, clear and complete.

6-3 Internal inspection

No.	Checking item	Acceptance criteria
1	Battery module	The exterior of each battery module is free from damage.
2	High voltage box	The exterior of the high voltage box is free from damage.
3	Foreign object	All foreign objects have been removed from the rack, such as tools and leftover installation materials.

6. Power on/off the equipment

6-1 Power-on procedure

1	Turn off the DC and/or PV Switch on the Inverter and the circuit breaker on the AC side according to the Inverter operating instructions.
2	Turn on the circuit breaker on the high voltage box.
3	Press and hold the START button on the high voltage box for more than 2 seconds.

6-2 Commissioning

Prerequisites


- 1) All devices on site have passed the on-site tests.
- 2) The system has been powered on and no alarm/fault is reported.
- 3) The commissioning tools are available on site.

6-3 Power-off procedure

1	Follow the steps in the manual or instructions of the inverter to turn it off and make sure it stops operating.
2	Turn off the DC and/or PV switch on the inverter and the circuit breaker on the AC side.
3	Turn off the circuit breaker on the high voltage box of battery system.

7. Electrical schematic

Primary schematic diagram of the energy storage system

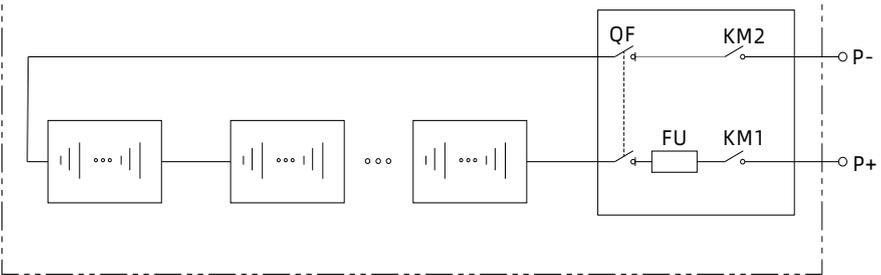

8. Service and contact

Shenzhen Growatt New Energy Co., Ltd.

4-13/F, Building A, Sino-German (Europe) Industrial Park,
Hangcheng Blvd, Bao'an District, Shenzhen, China

E service@ginverter.com

W en.growatt.com

For local customer support, please visit <https://en.growatt.com/support/contact>



Download
Manual



Growatt New Energy

GR-UM-463-A-00 (PN: 044.0136600)